



INSTRUCTIONS FOR PIONEER DVR-560HX-S 160 GIG HDD DVD RECORDER

NOTE IF WIDESCREEN AND NORMAL ARE MIXED THEN SEPARATE TRACKS ARE MADE FOR FINAL DVD.

MAKE SURE ALL CAMERAS ARE ON 4 x 3 RATIO or 16 x 9

NEW The Pioneer DVR 550 HX enables a scaling option up to 1080p via HDMI.

Buy 16 x speed blank DVD-R discs. For duplicating, use 8 x speed

NOTE TO STOP RECORDING, PRESS STOP REC BUTTON

NOTE DURING A CONFERENCE, DO NOT SWITCH MAINS WALL SUPPLY SWITCH OFF OVER NIGHT. If you do, after switch on check date and time by home menu – initial step up – clock. WHEN FINISHED USING DO NOT MOVE UNIT UNTIL 5 MINUTES AFTER SWITCH OFF AND MAINS DISCONNECTED.

The word divide can be confusing and comes from the film editing world where scissors were used. Say you had a twenty minute recording and wanted to have two chapters of ten minutes each (i.e. two menus on the DVD start up screen), when you select divide after ten minutes, the original becomes ten minutes less and a new one of ten minutes appears below. You then name them and when burning to DVD have a choice of start up colours. The start up screen will have those two names you selected.

Regarding editing unwanted parts I name the first unwanted part DEL1. When having selected the chapters, you want the list, it will show DEL1 not in pink and the next wanted part in pink etc. going upwards on the list, with the shortened original at the top.

The disadvantage of this method is that you lose the original recording regarding doing a fresh edit but this is unlikely, and say DEL2 was a section of worship you wanted for your next DVD you could rename it worship part 1.

Should buy DVD-R discs and not DVD+R. We have details of plastic cases that are not expensive. Do contact us

Slide bottom cover of remote control and use input select button to select L2 for front Composite input or L3 for the rear composite input. Set up the date and time by 'Home Menu, Initial Setup - clock'.

Press record button to start recording. **NOTE TO STOP RECORDING, PRESS STOP REC BUTTON**

Press Disc Navigator and move to the correct one (Bottom one) which will say a New One

Use arrow to the right to go to options and do Edit and give the file a Title Name

Press and hold Clear to delete title. (To go to clear move the arrow up as a quick way of getting there).

Go to Edit and select Divide. Choose Video Mode and press pause. (The other choice is for doing frame editing and cannot then do fast burn to a DVD)

I suggest that during an event you have a time elapsed stop watch going and make a note of the time beginning and end of important events (a particular song, testimony etc) to assist in the final edit.

Press play and press fast forward a number of times to rapidly find the time you need. The sound can be still heard on fast forward 1.

When you have the start point press the Pause Button. (It may be appropriate to stop 5 seconds before the chosen place and do play a couple of times to be sure this is the point you want to divide)

Recently we have learnt having done the Pause button that a quick press of fast forward or reverse will cause the time line to move and if you hold the button you can chose sixteenth, quarter and half movement which nearly looks like frame editing which on previous models could not be done with the fast burn option

Press enter. The new one below the original is the one that will not be used. (I give this unwanted section a name of DEL. i.e. 'delete' even if we are not going to delete it)

Go to the original recording again (which now shows the total minutes left) and it will start playing from the end of the last selected section. (You will need to know the number of minutes elapsed between the start and stop times and a calculator may be helpful.)

When you come to the end point again press Pause as above.

Press enter to do the divide. Now move from the yellow one to the one below we want and give it a title. Therefore you will have going upwards the list of the ones you want in the order with the ones you do not want going upwards with DEL1 and then DEL 2. (We do not delete them but just do not choose them in the next section

SELECTING CHOSEN SECTIONS TO GO ON THE DVD

Press Home Menu. Go to Copy, Press enter and press enter for HDD to DVD. Do Video Mode. Move to the first one you want at the bottom of the list and press enter. A pink background will appear; now continue upwards selecting the ones you want. The unwanted sections will not have a pink background.

(Note if had recorded on the HDD at more than SP mode then your total selections may be more than the 2 hours that a DVD disc can take.)

You will know that it is copying by the arrow on the screen of the DVD HDD Pioneer unit.

You have a choice now to do the copy and finalise. If you are planning to put further play lists on the DVD do copy and then finalise.

If not select finalise and start copy by click next on the right of the screen which shows the selection and do next again. You then have a selection of different coloured start up screens and I favour the blue one. Do 'Start Copy' and start copy.

When copying complete press enter.....press menu to see menu..... (note when finalise is finished it brings up a screen that makes you think that you need to do it again. This screen eventually goes off)

WHEN USING THE DVD ONLY

To finalise see page 52 of the manual. Press home menu. Press Disc Setup and press Setup. Move curser to Finalise (3rd one down). Next screen. When finished press Home Menu

ADDITIONAL INFORMATION

One can use the set up menu to change the input sound level if it is too high or too low

Bill Upchurch: 01895 624 774 Email: bill@llmedia.com

These instructions are not yet complete. Please come back to us with ideas

Labels on Machine at the front left to right "Before move unit switch off and disconnect the mains". "After switch on check date and time by home menu – initial set up - clock" and on the far right "L2 Composite Front In". On the remote control label "Stop Rec" below the word open on the cover . This is because Stop does not work and there is a dedicated Stop Record button. Put a label on the remote control that says "Input button under cover"

Bill Upchurch updated 24-09-07