



20 Manor Road  
Ruislip  
Middlesex  
HA4 7LB

Telephone: 01895 624 774  
Fax: 01895 473 649

Website: [www.llmedia.com](http://www.llmedia.com)

E-Mail: [info@llmedia.com](mailto:info@llmedia.com)

SongPro 4 with video overlay & the Dazzle DVD Recorder (Red or Green)

Note the Dazzle DVD Recorder (Green) will need to have the brightness set up initially and then the software saved.

To enable S-VHS to be used you will need whilst S-VHS is going to the unit change the input on the Dazzle software to S-VHS

The next section is an extract from the full instructions of SongPro to enable the successful use of the video overlay.

**NOTE IT SEEMS TO CONNECT BEST IF SONGPRO HAS ACTIVE TAKEN OFF FIRST**

In SongPro 4, click on the Songs or Liturgy tabs and hit enter to go 'active'. Then go to File, connect external device, Dazzle, press 'camera in background mode' (four buttons top middle of set up screen), then display in the normal way. To set up the text region for the Camera background: View, Pictures, Load folder "Patterns", select the black image which will be the "Camera", adjust the text region by right click with hold on the bottom of the white line and move upwards. Then use left click with hold and move down and then do Set.

This function is very important for putting the name of the speaker at the bottom of the camera image as well as songs etc.

To enable for example white text to be shown on all songs, on this previous black image, go to View, Pictures, Load folder "Patterns", remembering the black image is the camera. **Change the Font Colour on this screen** by clicking on the button Font Colour. Remember not to change the font position. Not this white text will only be on items where multiple font colours have not been set up. IE where the F keys for colours are still in action

**External overlay units** such as the Coriogen Eclipse or the Easy Fade unit need to have the video blanking colour set to Black and this is done by View. Options and by clicking on the blue colour. The keyboard V for video is now used for V for verse re the Bible and clicking on the words 'Display Normal' just above the Cancel button is the method used now.

Bill Upchurch 27-01-09